
【書類名】 図面


[図1]

図 1

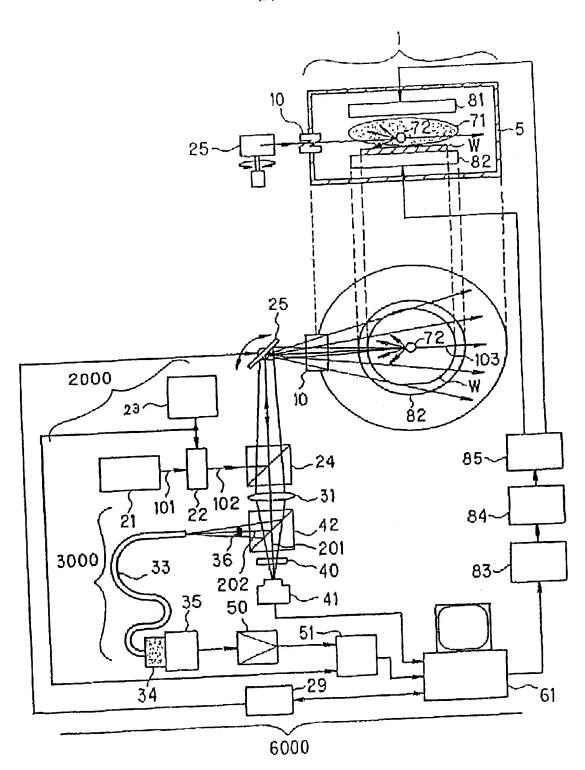


[図2]

図 2

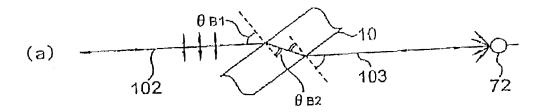


(b)

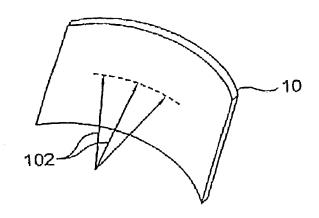


【図3】

図 3

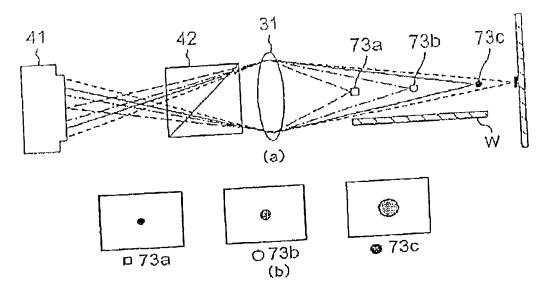

【図4】

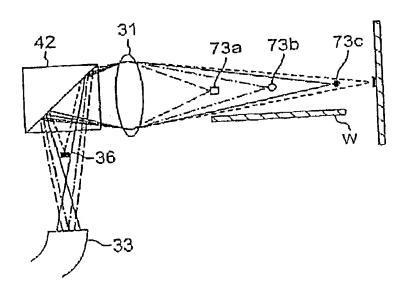

日立 構造如本許分

Nn. 8764 F 31

出願審類

ページ (42/ 61)

ファイル名 = D99008581A1.61

[图5]


2 10年12月 2万 17時19份

図5 55.5

| aser scattering due to contaminants | gentle on i zation | gentle on i zation | detection | detect

【図6】



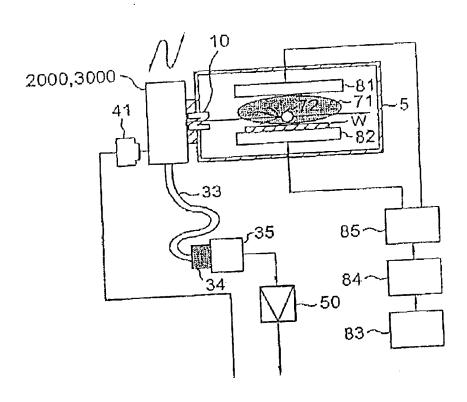

2000年18月 8日 17年19分 - 日文 横浜地本井2


Na. 3764 F. 38

山原香類

ページ(44/ 61)

ファイル名 = 03900A581A1. el (国7) 図7 Fig. 7

図 (, , 9 ,

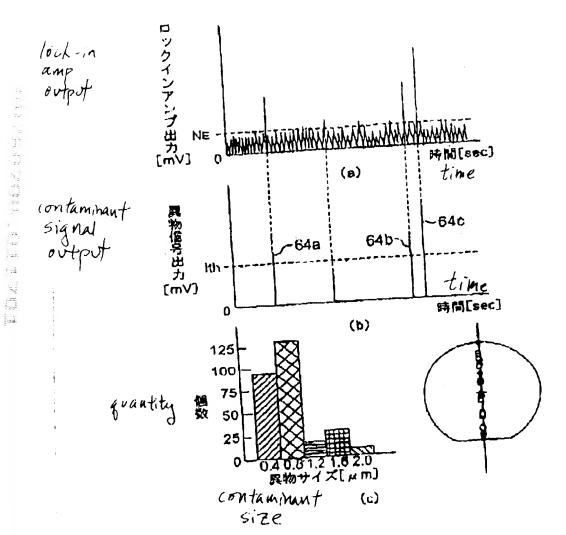

No 8264 F. 54

出願審類

ページ(45/ 61)

ファイル名 - D99008681A1.el

[छा ८]

图8 Fig &


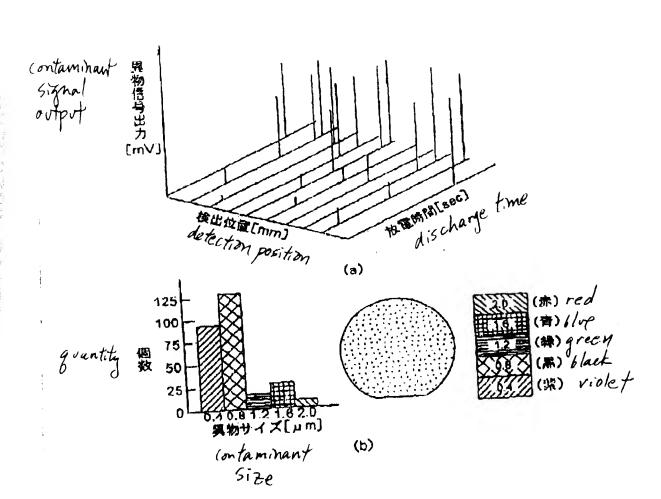


図 9

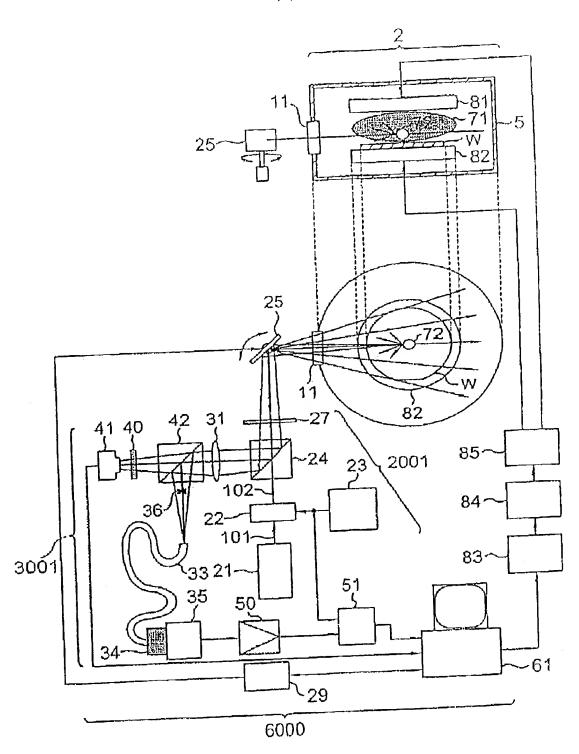

【図10】

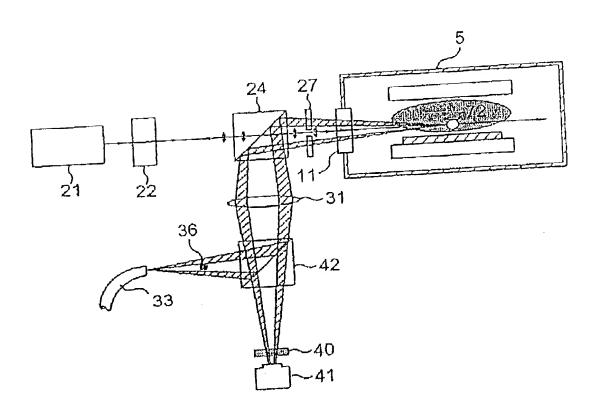
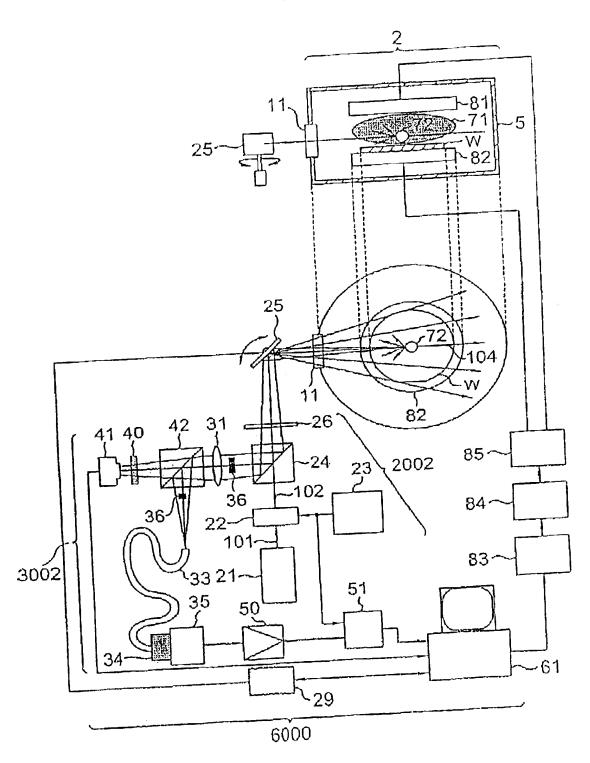


図11





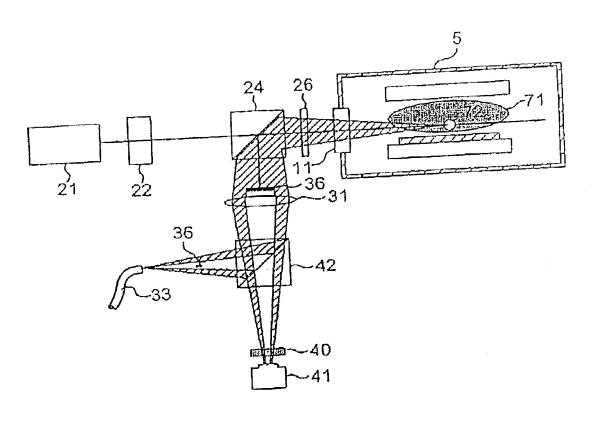


図13

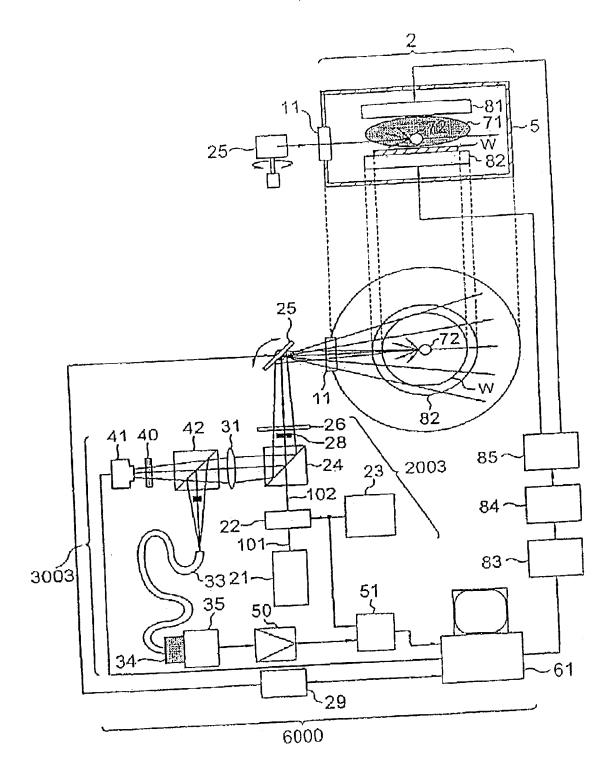


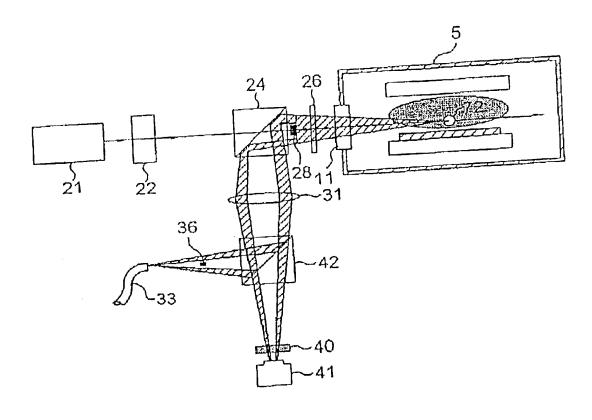

ファイル名 = D99008581A1.el


【図15】

図15

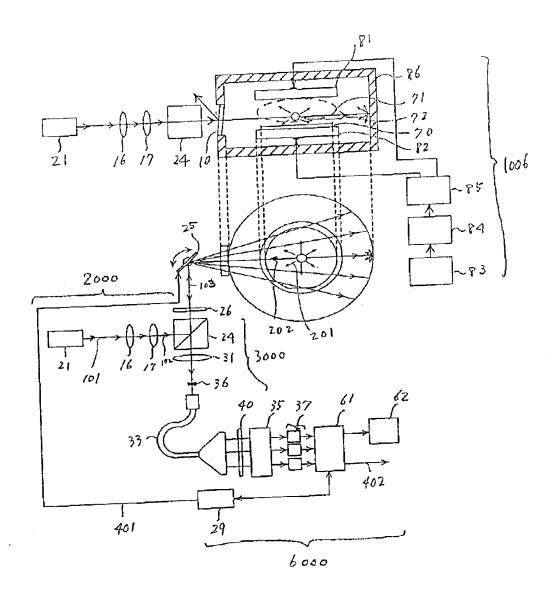


【図16】

図16

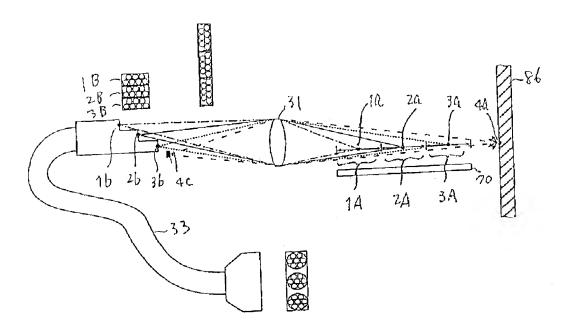

【図17】

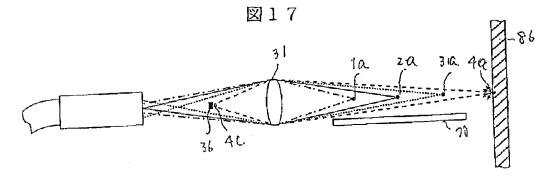

「99011第192 92 195216 Bi **模談味**到2

A: 8754 7 53


出了原理 蕃 溪風

ページ(54/ 61)

ファイル名 = D99008581A1 el

[3] 18]

図18

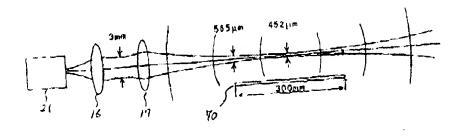

[M19]

19 Fig. 19

background noise fluctuation

strength

invited the strength stren

No. 8764 ° 54

出願書類


ページ(55/ 61)

ファイル名 = D99003581A1.61

[医20]


図20

contaminant signal strength

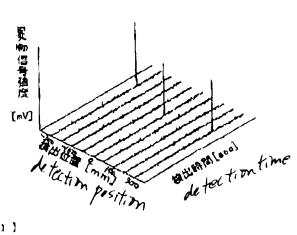

【图21】

図21

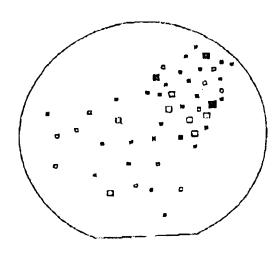


a 0.2~0.4pm


0.4~0.8pm

© 0,6~0.8µm

№ 0.8µm≨

【図22】

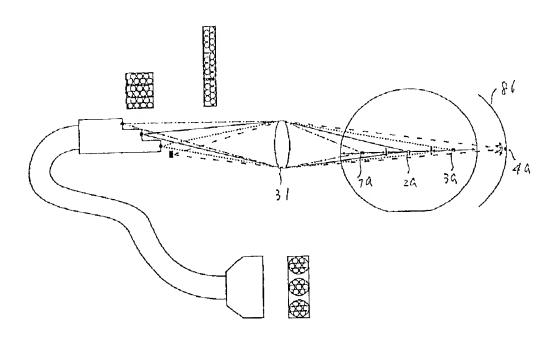


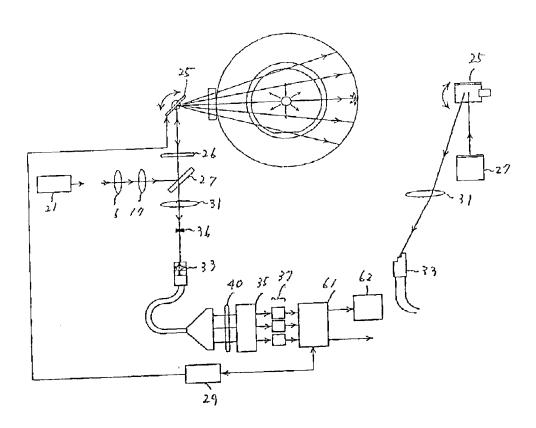

ファイル名 = D99008581A1.el


【図24】


図24

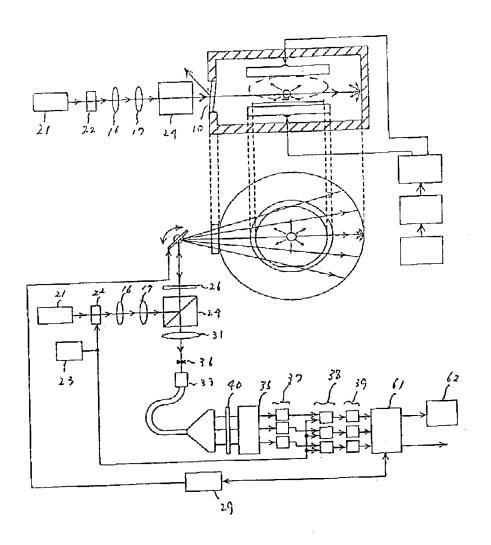

2、3 年12号 (23 179622) - - - - B.B. 横須知本在2

No. 8761 - 63

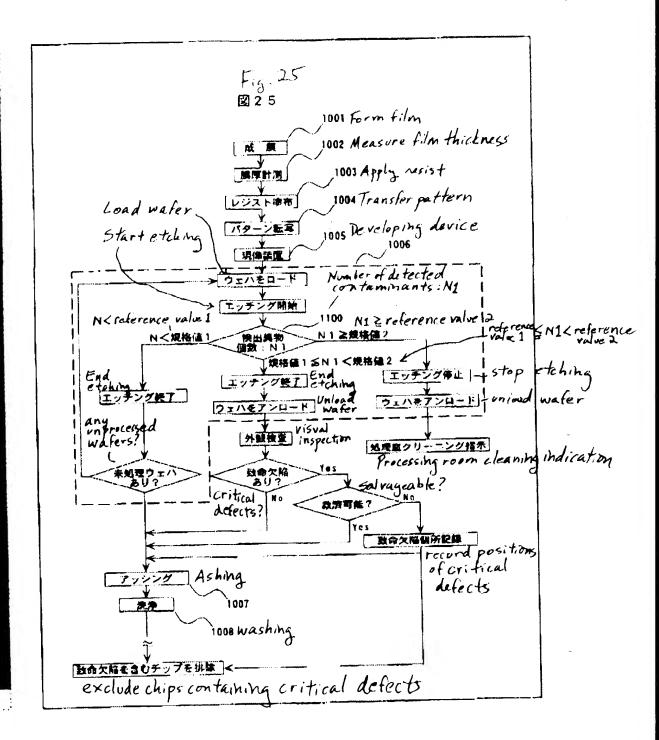

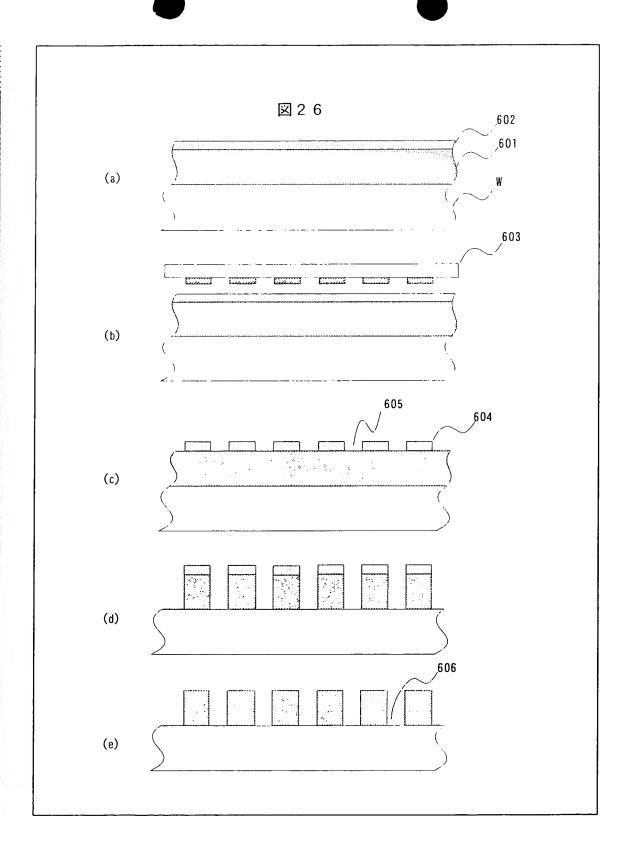






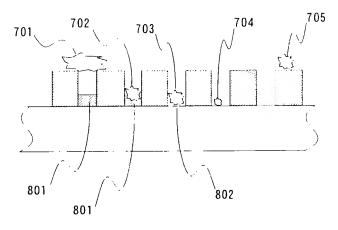


図28

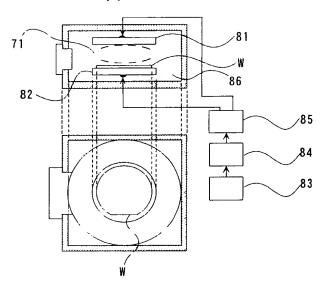

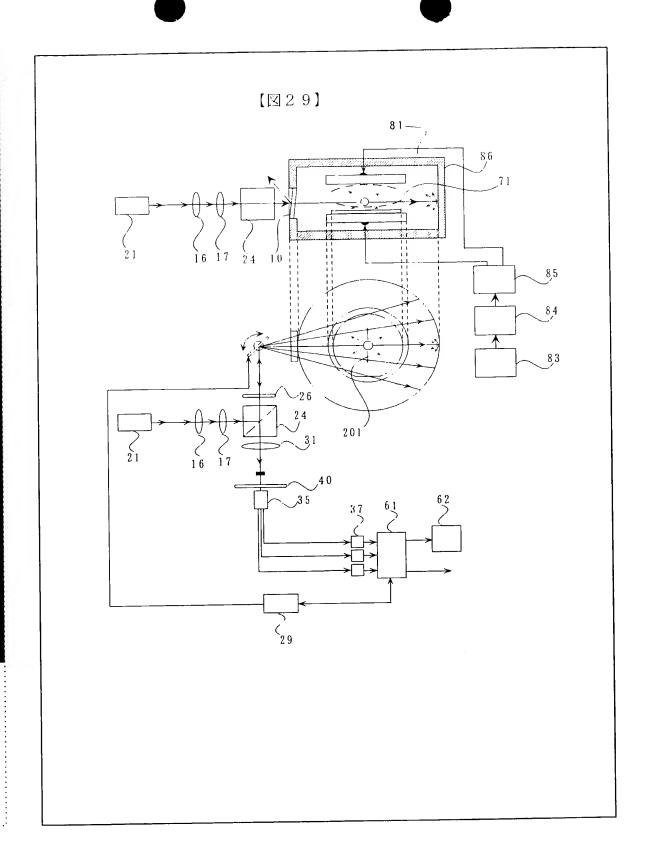


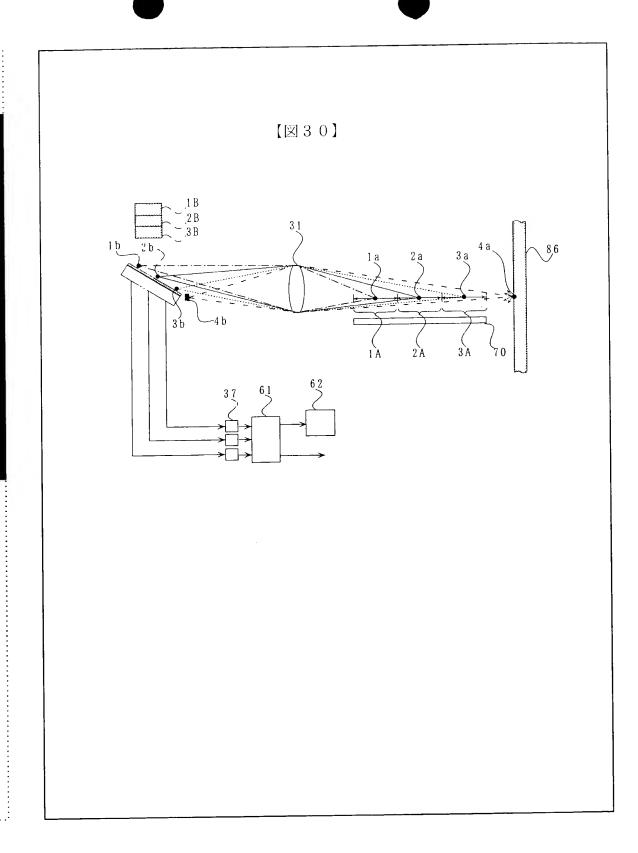

2000£108 08 17#23%

一日立:横浜知水等2

No. 3764 F 73

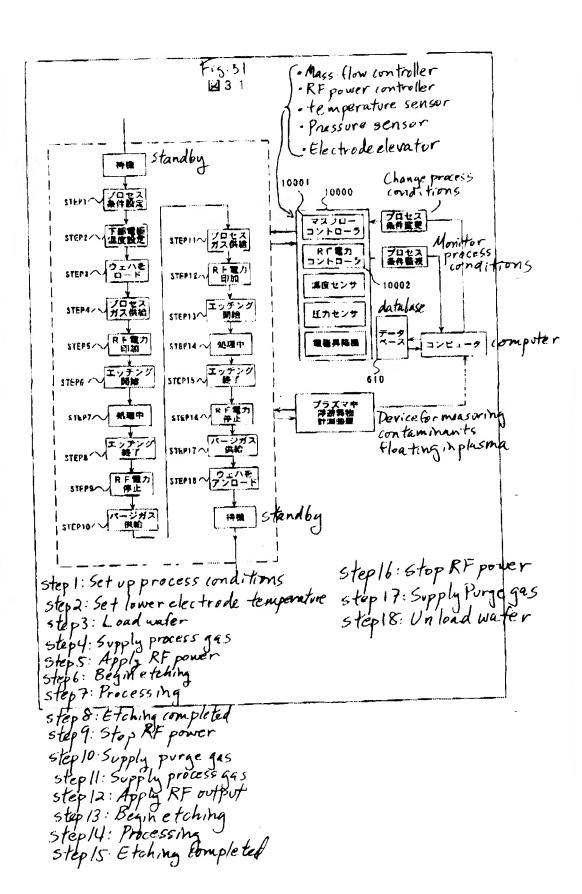

1.4

14

日立 概須知太許2

STEP

7.6.1年17. 35 17#23分

F14.32 · Mass flow controller RF power controller Temperature sensur Pressure sensor 1000T Electrode elevator standby Change process 10000 プロセス条件変更 マスフロ コンドローラ 下回電便 Monitor process conditions STEP1 / プロセス ガス供給 プロセス 条件管視 RF電力 コントローラ STEP12~ RF電力 -10002 温度センサ プロセス ガス供給 STEP13~ 開始 圧力センサ RF電力 印加 STEP14 ~ 热電中 コンピュータ Computer エッチンク STEP15/ STEP16 ~ R F電力 是事中 STEP13 ~ PUNE standby Step 16: Step RF power | Step 17: Supply Purge gas step 1: set up process conditions step 2: Set lower electrodo temperature Step 18: Unload wafer step 4: Supply process gas step 4: Supply process gas step 5: Apply RF power step 6: Beg metching stept Processing staps: Exching completed

Step 9: Stop RF power
Step 10: Supply purae gas
step 11: Supply process gas
Step 12: Apply RF output
step 13: Beam etching
Step 14: Processing
Step 15: Etching completed